


# INSTALL GUIDE

---

## SUPER-MAX

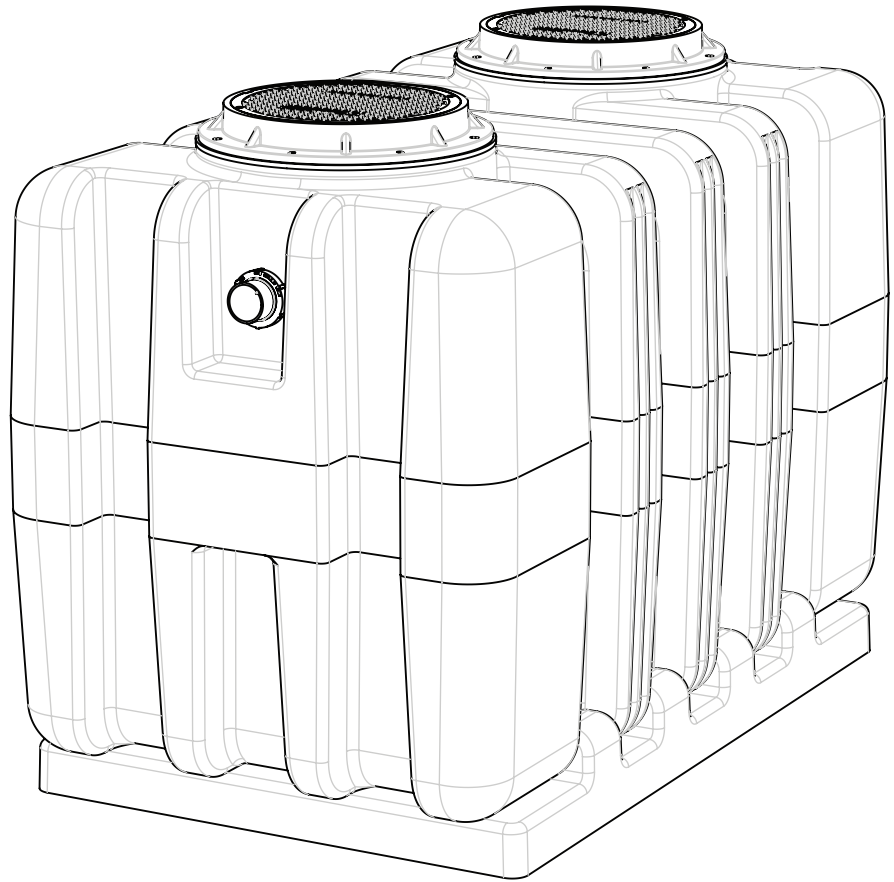

## CONTENTS

SPECIAL PRECAUTIONS

GENERAL INSTALL INSTRUCTIONS

BELOW GRADE INSTALL INSTRUCTIONS

EXTENSION COLLAR INSTALL INSTRUCTIONS

PARALLEL OR MULTIPLE INSTALL INSTRUCTIONS

APPLICATION SPECIFIC DETAILS

## SPECIAL PRECAUTIONS

### 1. HIGH TEMPERATURE KITCHEN WATER

If there is water entering the interceptor at over 150°F, a drain water tempering valve and approved backflow prevention assembly must be installed. Generally, state and local plumbing codes prohibit water above 150°F from being discharged into the sewer.

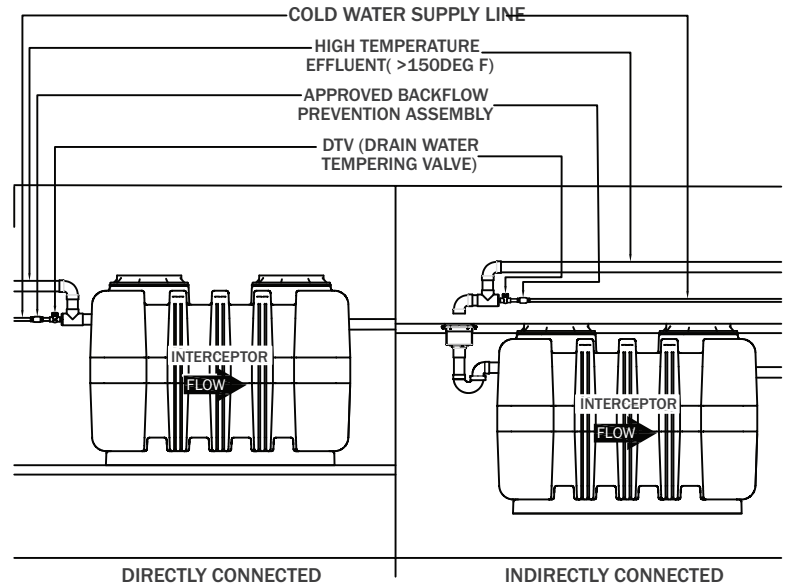


FIG. 1

### 2. HYDROSTATIC SLABS (OR PRESSURE SLABS)

Interceptor must be enclosed in a water concrete vault when installed under a hydrostatic slab (slab designed to withstand upward lift- typically caused by hydrostatic pressure).

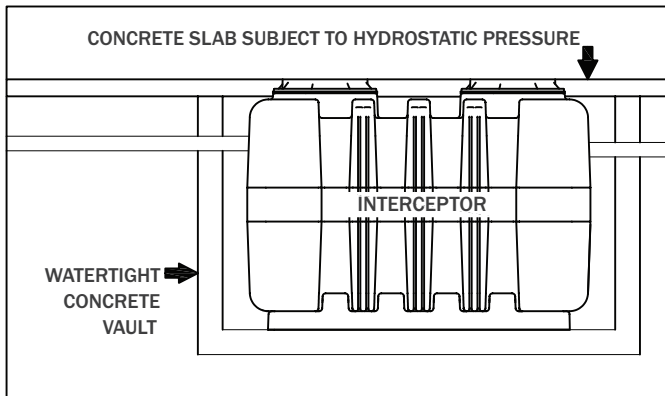


FIG. 2

### 3. HIGH WATER TABLE INSTALLATIONS

Interceptor and riser cannot withstand excessive water table height - see max water table height in figure 3. If possible, interceptor and riser should be installed in a water-tight concrete vault or backfill with concrete or flowable fill (pour wet concrete and flowable backfill in stages to avoid crushing the interceptor). SUPER-MAX models buried in high water table are required to be installed with an anchor kit. High Risk Areas: Floodplains, tidal surge and high storm-water areas.



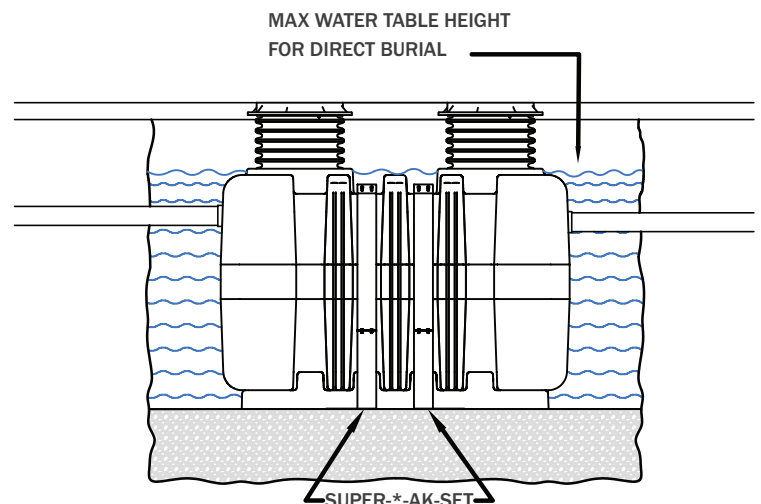


FIG. 3

## SPECIAL PRECAUTIONS

### 4. ABOVE GRADE INSTALLATION SUPPORT - ANCHOR KITS

Anchor kit is recommended for installation in high water table conditions to prevent float out. Necessity to be determined by Project Engineer. Hold down force achieved by backfill weight acting on anchor plates. Bolt upper support brace together, then place over center channel. Bolt the anchor plate and upper support brace together using bolting hardware. Anchor plate may be bolted to concrete slab using provided holes.

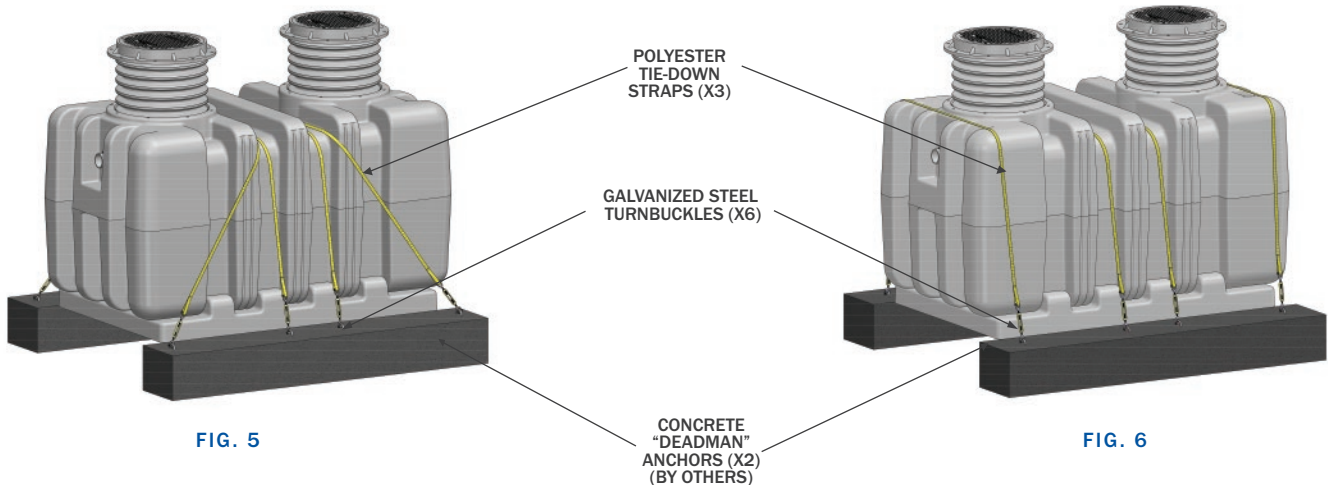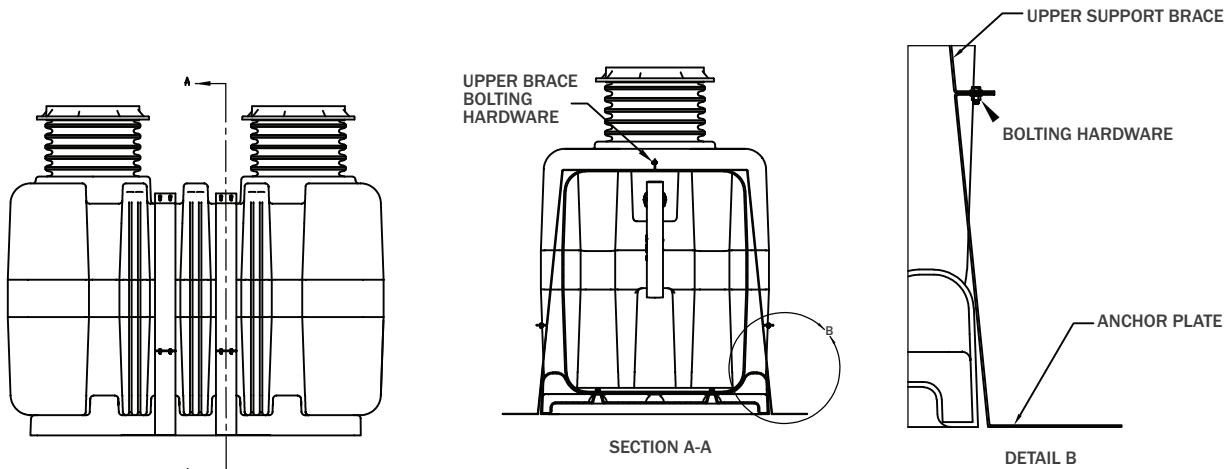

#### SUPER-*\**-AK-SET-2 (SPECIFY SIZE)

The SUPER-*\**-AK-SET-2 is used when greater hold down strength is required. The polyester tie-down straps and turnbuckles are rated at 2,200 lbs. working load each.


#### SUPER-*\**-AK-SET-3 (SPECIFY SIZE)

The SUPER-*\**-AK-SET-3 is used when greater hold down strength is required. The polyester tie-down straps are rated at 4,000 lbs. working load each and the turnbuckles are rated at 5,200 lbs. each.

## SPECIAL PRECAUTIONS

### 5. FULLY SUPPORT BASE OF UNIT

Interceptor must be installed on solid level surface with contact made on the entire footprint of the unit base. For suspended installations, a trapeze must be used to support the wet weight of the unit. The whole unit must be supported at all times - do not suspend unit using metal U-channel to create a trapeze.

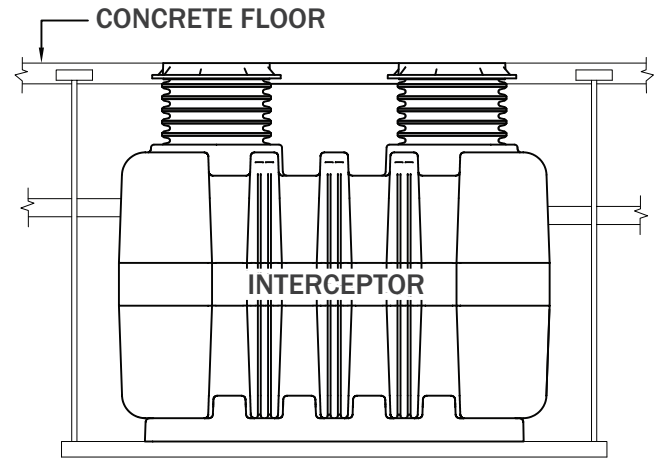

SUSPENDED INSTALLATION

FIG. 7

### 6. SUPPORT INLET AND OUTLET PIPING

The inlet and outlet piping connections require no hub pipe couplings. (See MIFAB's QuickHub Series of no hub couplings). Keep outlet piping as straight as possible. MIFAB recommends installation of 4" (102 mm) cleanouts on both the Inlet and Outlet of 4" SUPER-MAX interceptors and solids interceptors in accordance with all applicable laws, regulations and codes. Use only "sweep" connections. Do not reduce the pipe sizing on the outlet piping. Do not install a "P" trap on the outlet connection of system. (Note: The system already has an internal gas trap).

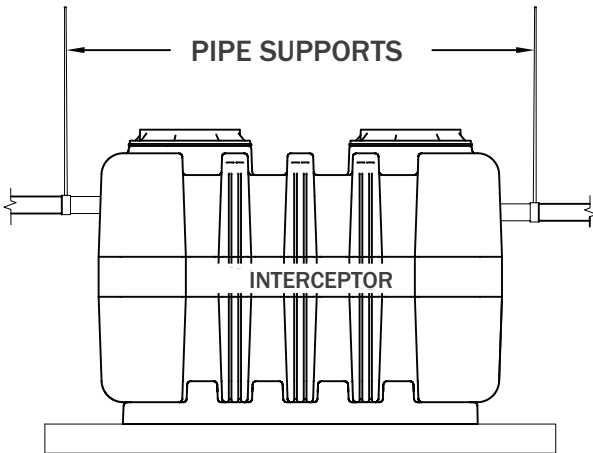


FIG. 8

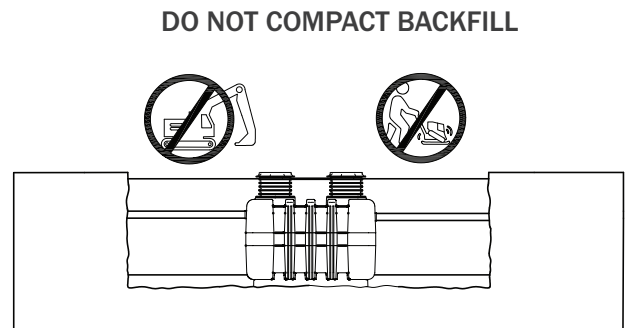


FIG. 9

# INSTALLATIONS

## GENERAL INSTALLATION

1. All SUPER-MAX interceptors can be installed above grade. The HDPE ribbed construction allows these interceptors to be placed on an engineered approved, load compliant and level surface. Under normal use, SUPER MAX interceptors will require no additional support to maintain full functionality. Seismic ratings and needs should be determined by a design engineer and based on established codes. The interceptor should be placed in a visible and easily accessible area for maintenance, cleaning, and inspection. Allowing space for the service provider to properly clean the vessel is a key consideration to efficient functionality.

2. MIFAB Interceptors should be set in place by the installer. The installer should ensure the pad/site is level and load rate compliant. The designed storage capacity of the interceptor and required codes will determine the plumbing schedule.

3. When installing a MIFAB Interceptor, proper venting is strongly recommended. Venting can be installed on the outlet of the unit which is preferred, or as close as possible to the outlet connection. MIFAB recommends a vent at least 50% the diameter of the system's outlet connection. **ALWAYS** consider and follow all local and industry code requirements.

4. Connection to the plumbing system is achieved by the use of no hub couplings. MIFAB recommends the use of Quick Hub no hub couplings. This will provide protection for the pipe at the connection points and ensure a strong connection between the SUPER-MAX unit and the plumbing system. No hub couplings should be installed and torqued to the supplying manufacturers recommendations.

5. Each SUPER-MAX unit is supplied with a factory sized internal flow control for each size unit available. An optional, external vented flow control fitting is available when the -PDI suffix is selected.

6. Pipe supports should be located every 16" on all vertical and horizontal piping. Allow for expansion as per local and national codes.

7. When combining more than one grease or solids interceptor in series or parallel always provide a 1" fall or change in grade between units.

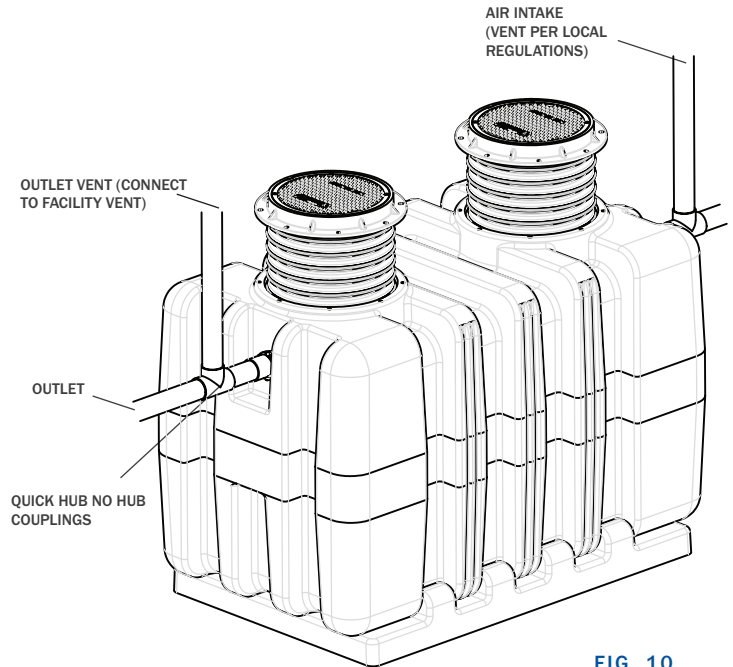


FIG. 10

## INSTALLATIONS

### BELOW GRADE/BACKFILL INSTALL:

1. Install the interceptor(s) as close as practical to the fixtures being served.
2. The excavation must be a minimum of 12" greater on all sides of the tank.
3. The depth of the excavation must be greater than 6" on the bottom of the interceptor.
4. Fill the interceptor with water prior to backfilling in order to prevent the interceptor from floating.
5. Fully install the double wall corrugated pipe and lid prior to backfilling.
6. Concrete or finishing material requirements is to be determined by the specifying engineer.
7. Encase the interceptor in well-packed  $\frac{3}{4}$ " rock, or sand. Do not compact backfill around interceptor.
8. To prevent float out; the Anchor kit is recommended for installations in high water table conditions. This is to be determined by the specifying engineer.

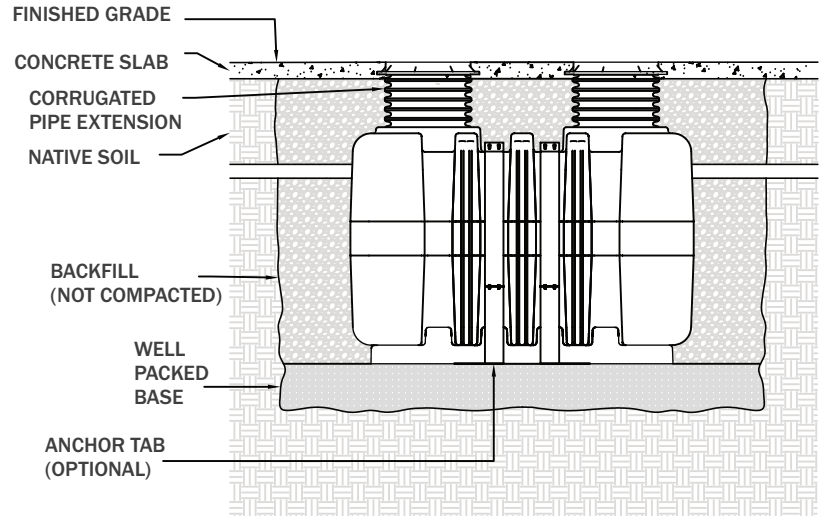


FIG. 11

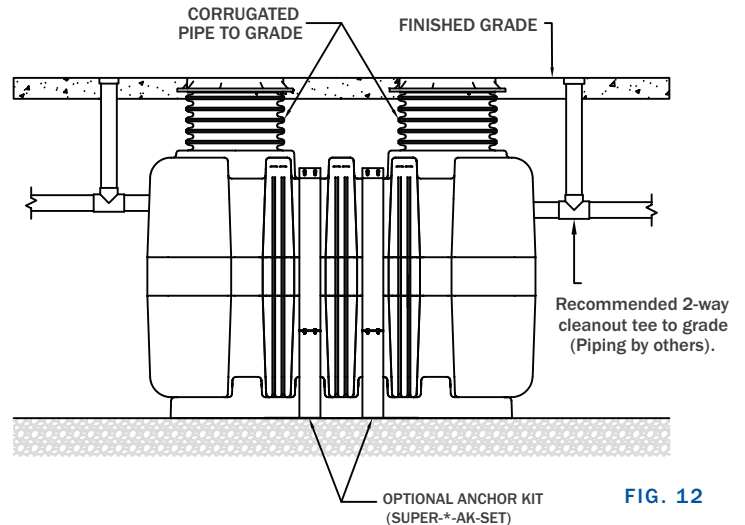


FIG. 12

### FINISHED CONCRETE SLAB

Slab must extend 18" minimum outside the footprint of the unit. **Pedestrian traffic areas:** 4" thick reinforced concrete slab required. **Vehicular traffic areas:** Minimum 8" thick concrete slab with rebar is required.

Thickness of concrete around cover to be determined by specifying engineer. If traffic loading is required, the concrete slab dimensions shown are for guiding purposes only. Concrete to be 28 day compressive strength to 4,000 PSI. Use #4 rebar (1/2") grade 60 steel per ASTM A615: connected with tie wire. Rebar to be 2-1/2" from edge of concrete and spaced in a 12" grid with 4" spacing around access openings.

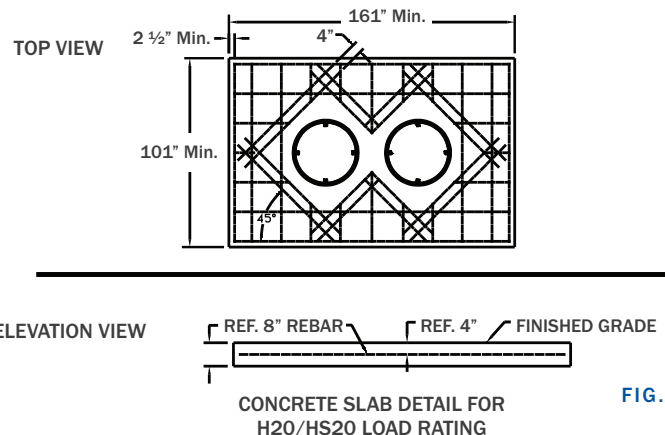


FIG. 13

# INSTALLATIONS

## EXTENSION COLLAR INSTALLATION

1. Set the SUPER MAX unit height to grade by installing the 18" diameter corrugated pipe onto the top opening(s) of the body, then insert the lid on top to measure and adjust the finished height from the top to grade. If less extension is needed, measure the required dimension and mark the extension. Then, cut to fit with a saw. The extension system is ADS pipe and is designed to be field cut as needed. If a longer extension is required to meet grade, new ADS pipe can be purchased and cut to length in order to equal grade. (ADS pipe part #18N12)

2. Install the Pipe Gasket between the bottom ribs. Then firmly press the 18" diameter pipe into the top opening(s) of the interceptor. It will bottom out at the pipe stop. The gasket is designed to fit tightly around the extension collar. Prying the gasket into place with a pry tool can save time and make this process easier. Watch the installation video at [www.bit.ly/ADS-gasket](http://www.bit.ly/ADS-gasket)

3. Insert the extension collar and pipe gasket onto the opening of the SUPER-MAX. Press firmly until the extension is seated inside the provided recessed channel. The SUPER-MAX is designed to fit tightly, and installation can be made easier by wetting the receiving area with mild soapy water. This will reduce the friction and allow the extension to press more easily into place.

4. Remove the cover from the lid assembly to see the predrilled screw holes. Affix the lid gasket with the self adhesive onto the underside of the collar. Place lid assembly onto the top of the corrugated pipe. Connect the lid assembly collar to the pipe with the 6 self tapping screws into the countersunk holes. Replace lid back onto the lid assembly collar.

5. When installing the collar on concrete roads, an 8 inch-width concrete ring beam with a 16" width guard circle around it should be poured between the collar and brick setting to make the surrounding compaction level and unmovable.

6. When installing the collar on a bituminous road, the collar must be installed after the road is paved. Roller compaction by construction equipment around the collar must be avoided. A hole that is slightly larger than the collar should be inserted before pouring the pavement. The reserved hole can help ensure the installation quality and prolong the usefulness of the installation.

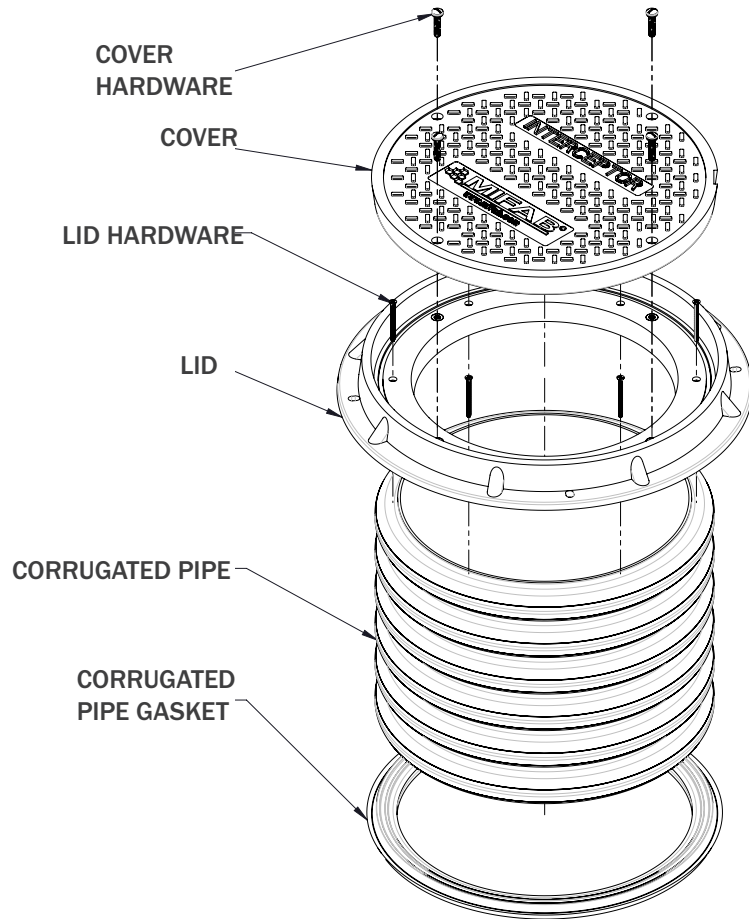


FIG. 14

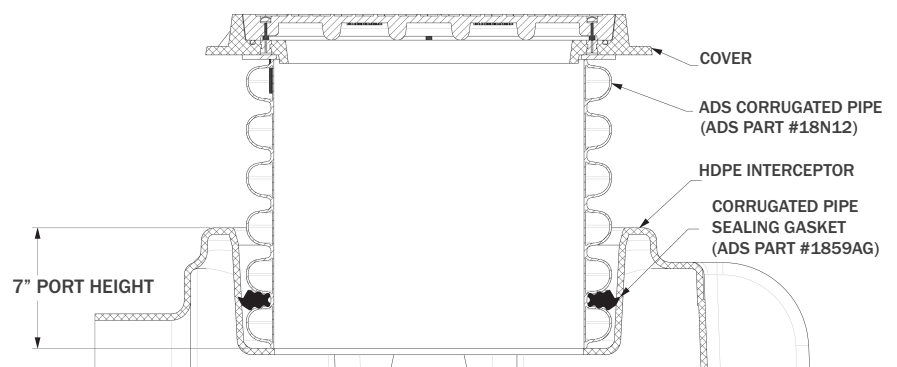


FIG. 15



# INSTALLATIONS

## PARALLEL INSTALLATION OF MULTIPLE GREASE INTERCEPTORS

When installing multiple SUPER-MAX units in series or parallel the elevation change from the preceding unit's center line to the next unit's center line should be 1" inch. This is to allow gravity to supply the required rate of fall and control the rate of flow to allow the needed separation time.

### 500 GPM

SUPER-500 - 6,984 lbs.  
SUPER-750 - 10,004 lbs.  
SUPER-1000 - 13,154 lbs.  
SUPER-1250 - 16,354 lbs.  
SUPER-1300 - 17,002 lbs.  
SUPER-1500 - 19,724 lbs.  
SUPER-2000 - 26,204 lbs.

### 750 GPM

SUPER-500 - 10,476 lbs.  
SUPER-750 - 15,006 lbs.  
SUPER-1000 - 19,731 lbs.  
SUPER-1250 - 24,531 lbs.  
SUPER-1300 - 25,503 lbs.  
SUPER-1500 - 29,586 lbs.  
SUPER-2000 - 39,306 lbs.

### 1000 GPM

SUPER-500 - 13,968 lbs.  
SUPER-750 - 20,008 lbs.  
SUPER-1000 - 26,308 lbs.  
SUPER-1250 - 32,708 lbs.  
SUPER-1300 - 34,004 lbs.  
SUPER-1500 - 39,448 lbs.  
SUPER-2000 - 52,408 lbs.


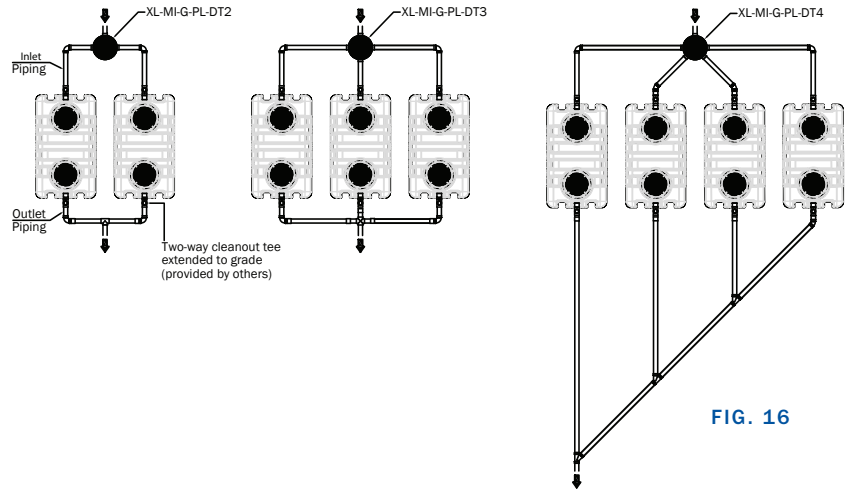



FIG. 16




## APPLICATION SPECIFIC DETAILS

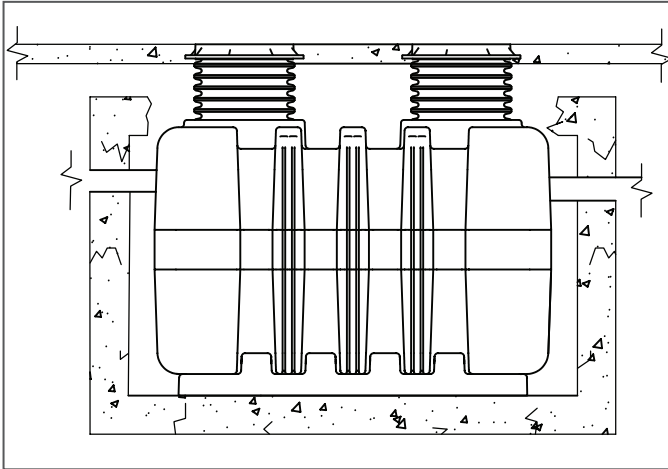


**INSIDE CORRODED CONCRETE UNIT**

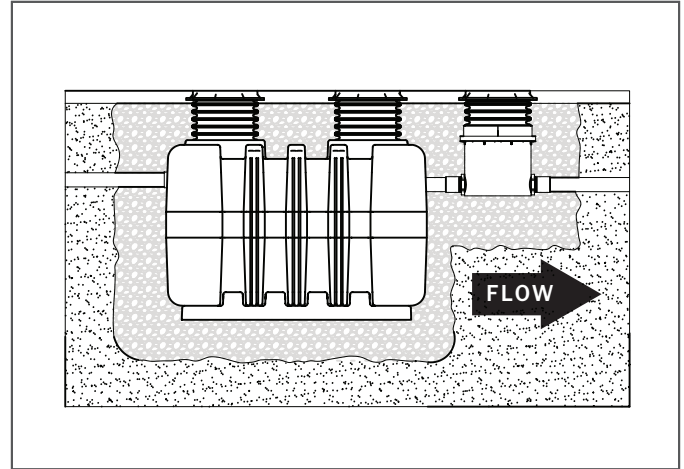


**BELOW GROUND INSTALLATION**

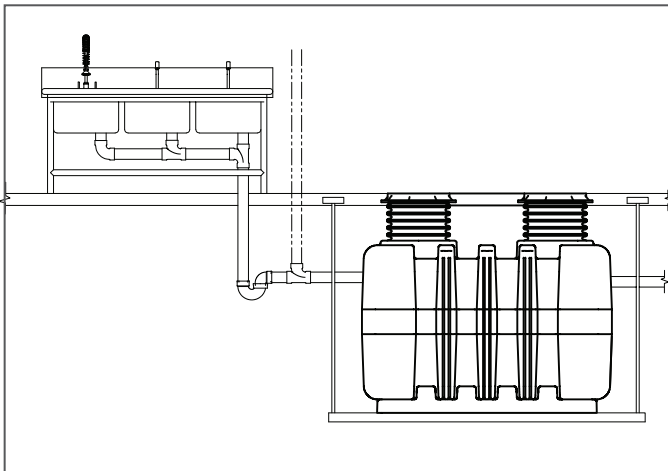


**RECESSED AND SUSPENDED**

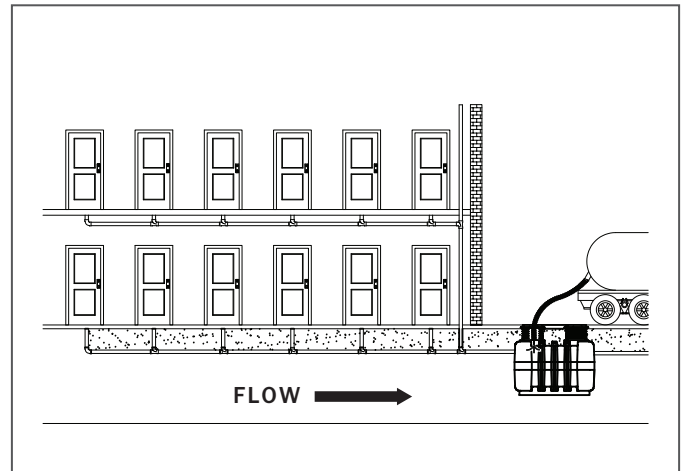

**SERVING AN APARTMENT COMPLEX**

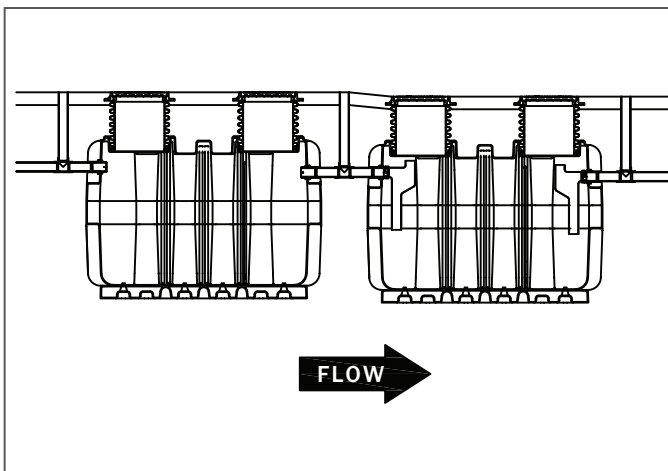

**BIG-300-S SOLIDS INTERCEPTOR IN FRONT OF SUPER-MAX GREASE INTERCEPTOR**

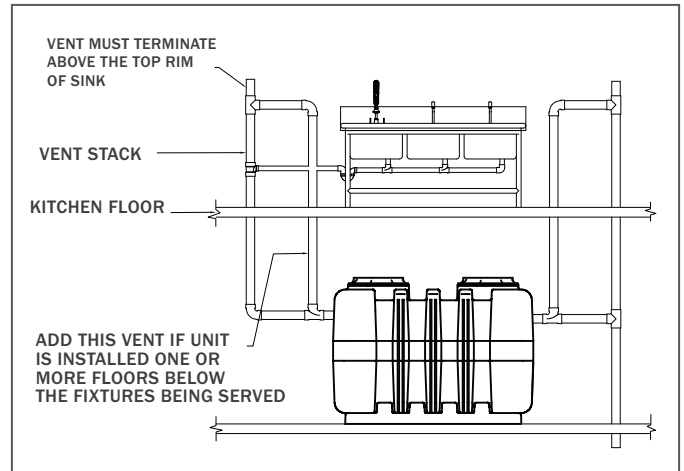

**ADDITIONAL VENTING FOR FLOOR-BELOW INSTALL**

## MAINTENANCE AND OPERATION

---

### MAINTENANCE

The grease interceptor system must be serviced once a year by a qualified person\*. In addition to emptying, the following jobs must be carried out:

The term “qualified” is used to describe employees at the owner-operators or from third parties who, on account of their training, knowledge and practical experience, can guarantee that they carry out evaluations or tests in a professional way in the respective field.

- Check on the inner wall of the sludge trap and the grease interceptor.
- Records of the findings and work carried out must be kept in the operating log and evaluated.
- The mechanical assemblies must be maintained.

### OPERATION

If the system tank is not filled with water again after emptying (level of tank overflow) greases and suspended matter can flow freely into the sewage system.

- Fill the system tank up to the system overflow.
- Seal the inspection cover.